
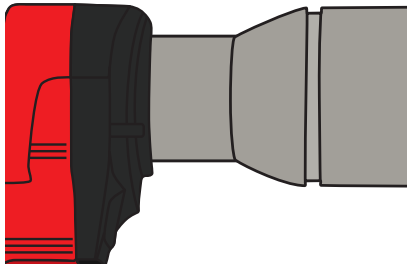


The secondary handle is an easy to fit and versatile accessory which offers additional support and ease of handling when applying torque with Norbar's powered multipliers. The secondary handle is designed to fit directly to those powered multipliers that have a location groove in the annulus, covered by a band, as shown below. Remove this band before fitting the secondary handle.

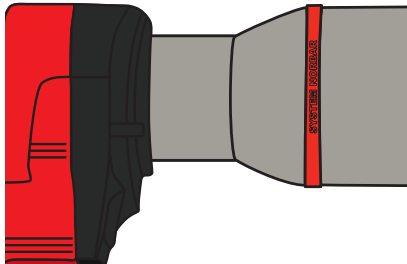

NORBAR TORQUE TOOLS LTD

Wildmere Road, Banbury,
Oxfordshire, OX16 3JU

UNITED KINGDOM

Tel + 44 (0)1295 270333

Email enquiry@norbar.com

To find your local Norbar
company or distributor, please
scan the QR code below.




View our 'How to Use a Torque Wrench'
Video at:


www.norbar.com/HowtoUseATorqueWrench




Secondary Handle

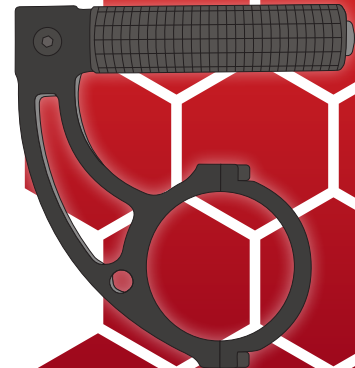

1 Remove both screws with a 4mm Allen Key

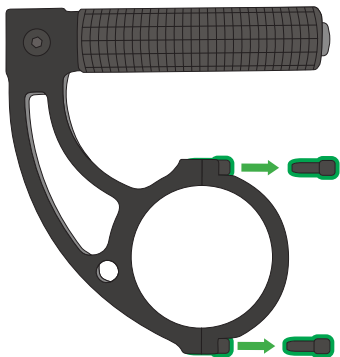

2 Position the Secondary Handle over the groove of the gearbox and tighten both screws to 9 N·m. The secondary handle has been designed so that it can freely rotate around the tool's gearbox. This means that the handle does not become a trap hazard.

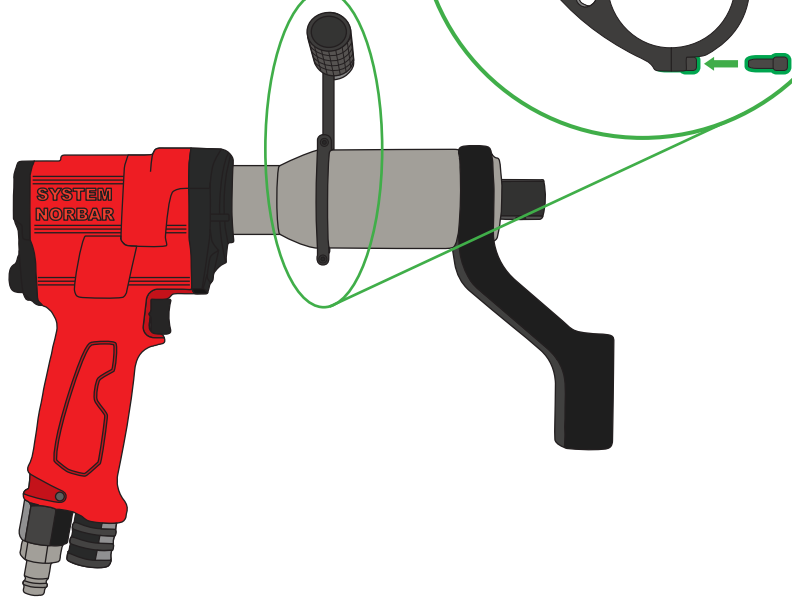

3 The handle grip can be re-positioned into 1 of 3 orientations. Remove the screw holding it in place and place the handle into the required position, then replace and tighten the screw.

